


Brondell®

Swash Thinline T22 Bidet Toilet Seat with Open Front Less Cover and Side Arm Control

Models: T22-OFLC-EW | Flushometer Valve Toilet Adapter Kit

Installation instructions for Swash water supply connection to a flushometer valve.

1. Shut off the water supply at the angle stop (option A) or the main water supply (options B & C).
2. Using the figure below, mark the center of the desired location for the adapter.
3. Drill a pilot hole at the mark. A center punch can be used to aid in starting the drill bit.
4. Use a 11/32" drill bit to drill the final hole.
5. Tap the hole using a 1/8-27 NPT bit.
6. Install the Adapter Valve (item 1). Use pipe sealant or Teflon tape on all male pipe threads.
7. Connect items 1- 4 as shown below.

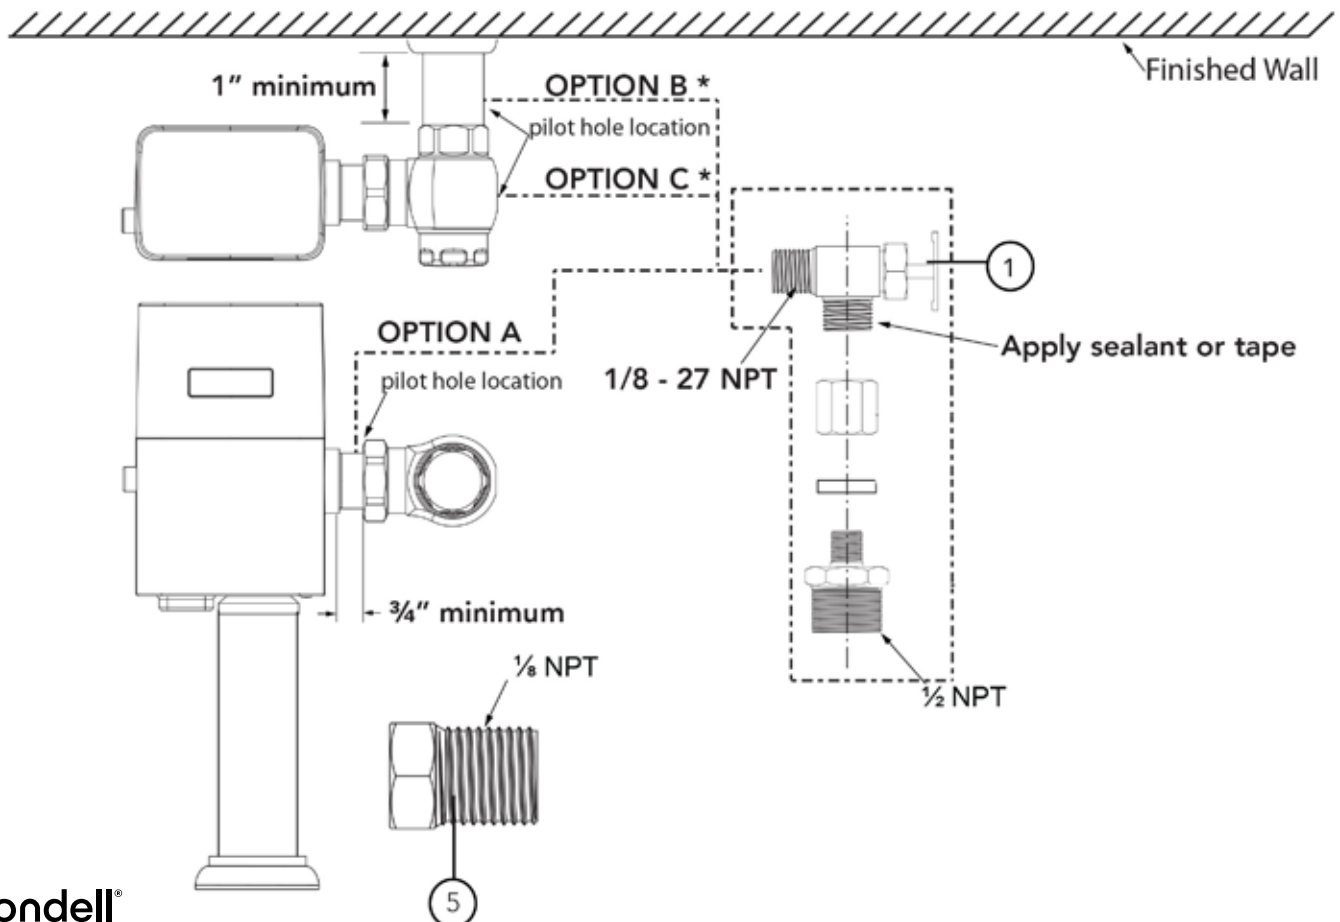

Brondell®

Feels better already.

Brondell, Inc.
PO Box 470085
San Francisco, CA 94147
brondell.com

#24T22-OFLC_0221